

UPRIM



PORTABLE UNIT FOR FOAM FIRE POINT

“The new 2000 model UPRIM, more robust and more practical”

- ◆ The extinguishing capacity of more than 40 fire extinguishers...
- ◆ Perfect stability because of the protective base plate.
- ◆ Tank made of polyethylene.
- ◆ Visual indication of foam level.
- ◆ Delivery hose withstands low temperatures.
- ◆ Wide carrying handle, easy to grip even with gloves on.
- ◆ Low and medium expansion corrosion resistant nozzles.
- ◆ Tank with removable cap for refill.



UPRIM BF

LOW EXPANSION



UPRIM MF

MEDIUM EXPANSION

TYPICAL USES

- ◆ Fires in built-up areas.
- ◆ Car fires.
- ◆ Motorway accidents.
- ◆ Smothering of gas escapes.
- ◆ Safety measures before welding operations.
- ◆ Installation on hose reels to increase their effectiveness.
- ◆ Protection of machine tools.
- ◆ Etc,

- Ø 10 litre tank.
- Ø Visual indication of foam level.
- Ø Maximum resistance to internal corrosion by foam compounds and to weather conditions.
- Ø composite proportioning nozzle calibrated to 3 or 6 %.
- Ø Stainless steel plunger pipe screwed into nozzle.
- Ø High density polyethylene medium expansion nozzles.
- Ø Nozzles can be interchanged in seconds using the rapid connector.
- Ø Delivery hose 0.60 M made of reinforced NBR.
- Withstands extremes of temperature, from - 30 à + 90°
- Ø Open / close tap allows perfect control of the appliance.
- Ø Wide, ergonomically designed carrying handle gives a sure grip even when wearing thick safety gloves.
- Ø Plastic base plate covers the bottom of the tank and ensures excellent stability.
- Ø Easy, fast maintenance.
- Ø Large opening for foam filling.
- Ø Guarantee : 1 year.

MODEL	DIMENSIONS H x L x P (mm)	WEIGHT EMPTY (kg)	WEIGHT FULL (kg) *	OPERATING PRESSURE (Bar)	FLOWRATE (L/min)	RANGE (M)	EXPANSION RATIO
UPRIM BF	630 x 274 x 185	3.250	13.550	3 – 10	60	4 à 9	8 – 10
UPRIM MF	630 x 365 x 185	3.550	13.850	3 – 10	60	3 à 6	50 – 70

* foam compound density : BASE 1,03 – AFFF

MODEL	CAPACITY	CONCENTRATION MIX-RATIO	PRE-MIX SOLUTION	RUNNING TIME	FOAM VOLUME medium expansion (50)
UPRIM MF	10 Litres	6 %	166 L	3. 2– 4.1 min	8.4 m ³
		3 %	333 L	6.4 – 8.2 min	16.7 m ³

UPRIM BF – LOW EXPANSION		UPRIM MF – MEDIUM EXPANSION	
1" thread	1" ½ thread	1" thread	1" ½ thread
I30.00.041	I30.00.054	I30.00.042	I30.00.055

	LOW EXPANSION NOZZLE	MEDIUM EXPANSION NOZZLE	TRANSPORT HOLDER	TANK	CAP
REFERENCE	I30.80.031	I30.80.032	I30.80.033	I30.80.035	I30.80.006

U.P.R.I.M.

UTILISATION - INSTRUCTION FOR USE - GEBRAUCHSANWEISUNG

1

2

3

4

5

Diriger le jet selon les instructions et procédures d'attaque propres à l'entreprise, et au type d'émulseur (attaque directe, sur paroi, de face...)

Point the branchpipe to the fire, according to instructions and procedures specific to the company, and the chosen foam compound (direct, side, wall, front attack...)

Richten Sie das Schaumrohr auf den Brandherd. Beachten Sie die innerbetrieblichen Brandvorschriften, (Anweisungen sowie die Eigenschaften des eingefüllten Schaummittels...)

APRÈS UTILISATION

Après chaque utilisation, la tête proportionneuse doit être retirée, le tube plongeur immergé dans l'eau et l'ensemble doit fonctionner pendant 2 minutes afin de le rincer complètement.

AFTER USE

After each use, the proportioning head should be removed from the cylinder and the system operated for 2 minutes with the pick-up tube immersed in a bucket of water in order to flush the unit.

NACH GEBRAUCH

Nach dem Gebrauch des SCHAUMBLITZES, Oberteil entfernen. Ansaugrohr in einen wassergefüllten Eimer stellen und ca. 2 min. durchspülen. Danach SCHAUMBLITZ wieder auffüllen.